

Awning Installation Guide



Unpack Awning And Locate Mounting Brackets




Mock Up Brackets 18" From Ends / 6-12" From Shoulders




Mark Wall For Bracket Placements



Place Bracket Bottom 9 Inches or More From Soffit

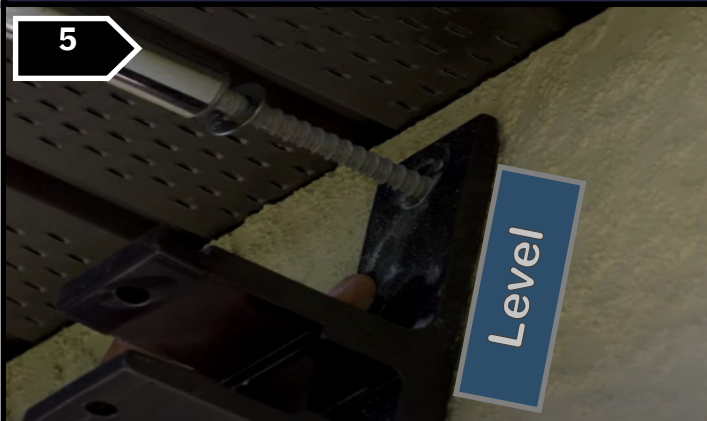

Drill Holes, Level, and Install Run a Straight Line From One End Brackets End Bracket To The Other

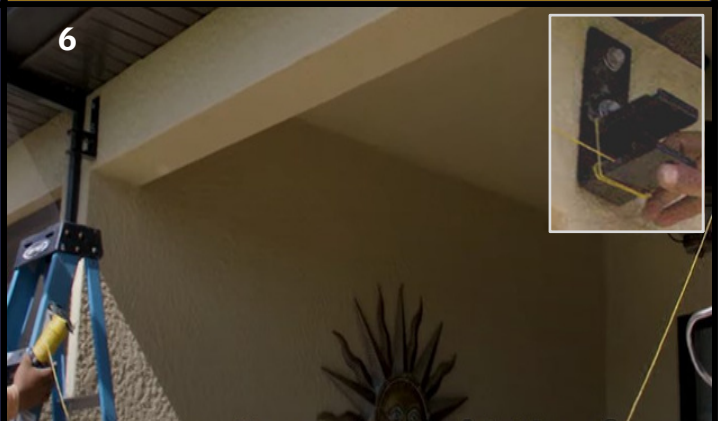

Run a Straight Line From One End Brackets End Bracket To The Other

Awning Installation Guide



Use Line To Mount Remaining Brackets



Team Lift The Awning Into The Brackets

Use String Gauge For Proper Height On Center Brackets

Team Lift The Awning Into The Brackets



Install Retention Bolts While Lifting Awning



10 Connect to GFCI Protected Power Outlet

Install Retention Bolts While Lifting Awning

Connect to GFCI Protected Power Outlet



Adjust Limits As Needed 11



Adjust Awning Pitch As Needed 12

Adjust Limits As Needed

Adjust Awning Pitch As Needed